


SANDBAGGING INSTRUCTIONS

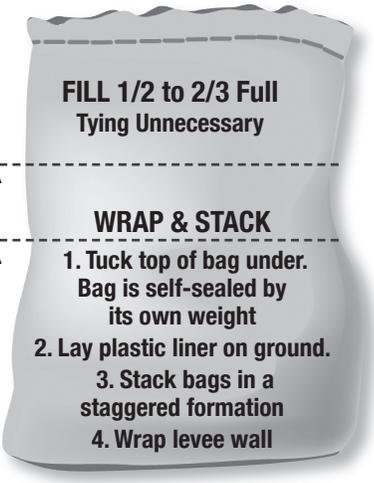


| BAGS PER 100 LINEAR FEET OF LEVEE | | |
|-----------------------------------|--------|-------------------|
| Bags | Height | Bags Required +/- |
| 3 | 1 Foot | +/- 600 |
| 6 | 2 Feet | +/- 1200 |
| 9 | 3 Feet | +/- 4500 |
| 12 | 4 Feet | +/- 7800 |

STACKING & STAGGERING FORMATION



SANDBAGGING OVERVIEW

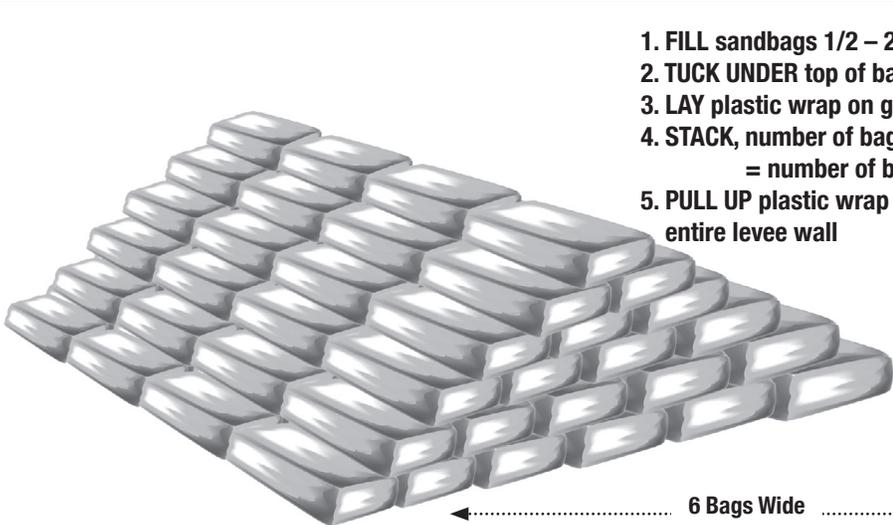

1. FILL sandbags 1/2 – 2/3 full
2. TUCK UNDER top of bag
3. LAY plastic wrap on ground
4. STACK, number of bags high = number of bags wide
5. PULL UP plastic wrap to cover entire levee wall